

DRYER

Operation Guide

The contents may not exactly match your dryer model.



Select Dry Cycle/Options

- 1 Press the Power button.



- 2 Turn the knob to select the desired cycle.



- 3 Select modifiers, extra functions, and options.

- All buttons are touch type.

- If you change the cycle, the preset modifiers and options will be changed. Set them again.



- 4 Press the Start/Pause button.



Using Options

- 1 Press the Options button.



- 2 Turn the knob to select the desired option. Press the OK (OK) button to save the option.

- Options lists may vary by model.



- 3 Turn the knob to select the desired setting and press the OK (OK) button to save the setting.



- 4 To return to the previous screen, press the Options button again or press the Previous (Previous) button.

 
NOTE

- If no action is taken for several minutes after pressing the Options button, the display reverts to the previous screen.

Using Cycle List Edit

Edit the list of dry cycles as desired.

- 1 Press the Options button.



- 2 Turn the knob to select Cycle List Edit and press the (OK) button.



- 3 Turn the knob to select the desired cycle and press the (OK) button to include or exclude cycles.



- 4 Press the (Previous) button to save the cycle list.
- 5 To return to the previous screen, press the Options button again or press the (Previous) button.

Using Cycle Optimization

Organizes the cycle list and options automatically based on your usage patterns.

- 1 Press the Options button.



- 3 Turn the knob to select On or Off and press the (OK) button.

- On is the default setting.
- Selecting Off retains the current list order.



- 2 Turn the knob to select Additional Settings and press the (OK) button. Turn the knob to select Cycle Optimization and press the (OK) button.
- 4 To return to the previous screen, press the Options button again or press the (Previous) button.



MBM67502241
Rev.01_070622

WASHING MACHINE

Operation Guide



Select Wash Cycle/Options

1 Press the Power button.

- On models with the ezDispense function, a notice will appear if the detergent or softener is low. Refill the reservoirs as needed.

 


2 Turn the knob to select the desired cycle.



Using Options

1 Press the Options button.



2 Turn the knob to select the desired option. Press the OK button to save the option.

- Options lists may vary by model.



* All buttons are touch type.

3

- Select modifiers, extra functions, and options.
- If you change the cycle, the preset modifiers and options will be changed. Set them again.



4 Press the Start/Pause button.



3 Turn the knob to select the desired option and press the OK button to save the option.



 
4 To return to the previous screen, press the Options button again or press the Previous button.

NOTE

- If no action is taken for several minutes after pressing the Options button, the display reverts to the previous screen.

Cómo usar la edición de la lista de ciclos

- 1 Presione el botón Options (Opciones).



- 2 Gire la perilla para seleccionar Cycle List Edit (Editar lista de ciclos) y presione el botón ▶ (Aceptar).



- 3 Gire la perilla para seleccionar el ciclo deseado y presione el botón ▶ (Aceptar) para incluir o excluir ciclos.



Edite la lista de ciclos de lavado según su conveniencia

- Si agrega un ciclo, se mostrará una marca de verificación junto al mismo.
- Los ciclos Normal y Tub Clean (Limpieza de Tina) no pueden eliminarse.
- Cambie el orden de los ciclos en la lista con Additional Settings (Ajustes adicionales) > Cycle Optimization (Optimización del ciclo) en el producto o en la administración de ciclos del producto en la aplicación LG ThinQ.

 


- 4 Presione el botón ▶ (Anterior) para guardar la lista de ciclos.

- 5 Para volver a la pantalla anterior, presione el botón Options (Opciones) de nuevo o ▶ (Anterior).

Cómo usar la optimización del ciclo

- 1 Presione el botón Options (Opciones).



- 2 Gire la perilla para seleccionar Additional Settings (Ajustes adicionales) y presione el botón ▶ (Aceptar). Gire la perilla para seleccionar Cycle Optimization (Optimización del ciclo) y presione el botón ▶ (Aceptar).



- 3 Gire la perilla para seleccionar On (Encendido) u Off (Apagado) y presione el botón ▶ (Aceptar).

- La configuración predeterminada es On (Encendido).
- Si selecciona Off (Apagado) se mantiene el orden actual de la lista.



- 4 Para volver a la pantalla anterior, presione el botón Options (Opciones) de nuevo o ▶ (Anterior).



MBM67502234

Rev.01_062222

Using Cycle List Edit

Edit the list of wash cycles as desired.

- 1 Press the Options button.



- 2 Turn the knob to select Cycle List Edit and press the (OK) button.



- 3 Turn the knob to select the desired cycle and press the (OK) button to include or exclude cycles.
• If a cycle is added, a check mark is displayed

by that cycle.

- The Normal and Tub Clean cycles cannot be deleted.
- Change the order of the cycles in the list using Additional Settings > Cycle Optimization on the product or Product Cycle Management in the LG ThinQ application.



- 4 Press the (Previous) button to save the cycle list.
5 To return to the previous screen, press the Options button again or press the (Previous) button.

Using Cycle Optimization

Organizes the cycle list and options automatically based on your usage patterns.

- 1 Press the Options button.



- 2 Turn the knob to select Additional Settings and press the (OK) button. Turn the knob to select Cycle Optimization and press the (OK) button.



- 3 Turn the knob to select On or Off and press the (OK) button.

- On is the default setting.
- Selecting Off retains the current list order.



- 4 To return to the previous screen, press the Options button again or press the (Previous) button.



MBM67502234

Rev.01_062222